

Spare Part List for SHRINKFAST-Heat Tool Type 998

<u>Item-Nr.</u>	<u>Item</u>	<u>Pos.-Nr. (Drawing)</u>
1000010	Filter Holder	1
1000020	O-Ring	2
1000030	Filter	3
1000040	Filter Spring	4
1000050	Orifice	5
1000060	O-Ring	6
1000070	Retainer	7
1000080	Inlet	8
1000090	Fuel Line	9
1000100	Body	10 not available as spare part!
1000110	Label, Right Hand	11
1000120	Label, Left Hand	12
1000150	Housing, Right Hand	15
1000160	Housing, Left Hand	16
1000530	Trigger-Igniter-Assembly	17 + 18
1000200	Safety	20
1000210	Spring	21
1000220	Valve Assembly	22 + 23B
1000231	Hose Adapter	23B
1000250	Contact Screw	25
1000260	Contact Spring	26
1000270	Socket	27
1000280	Spark Plug	28
1000290	Assembly Screw	29
1000300	Combustor	30

Page - 1 -

Page - 2 -

Spare Part List for SHRINKFAST-Heat Tool Type 998

<u>Item-Nr.</u>	<u>Item</u>	<u>Pos.-Nr. (Drawing)</u>
1000310	Button	31
1000320	Flameholder	32
1000330	O-Ring	33
1000340	Strap	34
1000350	Button Spring	35
1000410	Guard Screw	41
1000431	Guard - Euro	43B
1000830	Screen	83
1000361	Gas Hose, 8 m long	-
1000520	Pressure Reducer 1,5 bar with integr. hose rupture protection	-
1000521	Swivel	-
1000522	Nylon sealing disc for combi connection on pressure reducer	-
1000441	UL Guard	-